

Sun



Gait Trainer

Two configurations. Three sizes.

A height-adjustable frame, with supports you can select and position for the user.

Position the supports.

Backrest angles: 80°, 85° and 90°.

Headrest adjustment in height, depth and lateral position.

Swivel forearm supports with an adjustable handlegrip option.



Posterior configuration
Shown with optional accessories.



ROLLING RESISTANCE

Turn. Roll. Feel the difference.

Turn the knob to change rolling resistance. Rear castors also provide braking and directional control.

Support that wraps around.

Adjust the fit.

Padded trunk support with adjustable straps, height and tilt. For anterior or posterior use.



Anterior with optional accessories

Select as needed: backrest, headrest, arm supports, chest support and seats.

The headrest and posterior saddle seat require a backrest. The anterior support seat is for setup and short rests, not full weight-bearing seating.

Small. Medium. Large.

Dimensions in cm, unless stated

Dimension	Small	Medium	Large
User height	100–125	115–150	134–175
Overall height, including headrest	89–114	104–139	123–164
Overall width	55.5	60	62.5
Inner width	44	49	52
Overall depth	86	90.5	92
Inner depth	62	66	70
Height from bottom to handle	53.5–67.5	69–90	86–113
Weight capacity	76 kg / 168 lb	76 kg / 168 lb	76 kg / 168 lb

Size data: Beneland Sun brochure, June 2026. Accessory limits are separate.

Let's configure Sun.

info@beneland.cn / beneland.net

Watch Sun in action.
Official Beneland channel

